


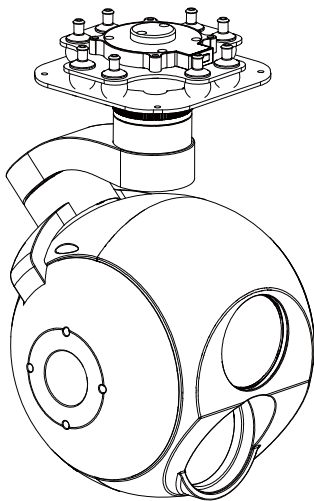

**Q30TIR Pro**  
**30x Optical Zoom EO+1280\*1024 IR**  
**Dual-sensor Object Tracking Gimbal Camera**

User Manual



For more details please scan the QR code  
or visit our website:

[www.viewprotech.com](http://www.viewprotech.com)

# Disclaimer and Warning

Congratulations on purchasing your new Viewpro product. Please read this entire document carefully. Failure to read or follow instructions and warnings in this document may result in damage to your Viewpro product. Disassemble the gimbal camera by user is not permitted, as which may cause the camera does not work normally.

Viewpro accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of this project. The user shall observe safe and lawful practices including, but no limited to, those set forth in the manual.

## Legends



Warning



Important Note

## 1.Product Introduction


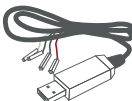



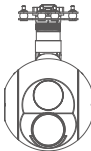
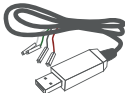




### 1.1 Introduction




Q30TIR Pro is a high-precision 3-axis gimbal integrated with a 30x optical zoom SONY camera and 50mm lens 1280\*1024 IR thermal sensor. It supports visible optical zoom, IR thermal and visible PIP switch, IR color palette switch, photographing and video, target tracking, thermal digital zoom. When the external GPS and time input, the OSD can display angle, zoom times, GPS and real-time and tracking frame, also can select to turn off the OSD. It features fast focus, aluminum alloy housing and anti-interference. The 3 axis gimbal can achieve stabilization in yaw, roll and pitch. The integrated design of damping system and gimbal can greatly reduce mechanical vibration.

The EO camera is equipped with an approximately 4.17 million effective -pixel, 1/1.8" STARVIS night vision CMOS Sensor (min 0.00008 lx ultra low illumination), super image stabilizer and new iris lens. The ICR ON COLOR function enables the camera to capture shots with color even when the IR cut filter is removed. It is effective for color visibility in dark environments.

Q30TIR Pro is widely used in UAV industries of public security, electric power, fire fighting, zoom aerial photography and other industrial applications.


## 1.2 In the Box

A. Standard Version			
Gimbal Camera x 1 pcs		USB to TTL Cable x 1 pcs	
Aluminum Cylinder x 4 pcs		M3 Screw x 8 pcs	
Power Cable x 1 pcs			
B. Viewport Version			
Gimbal Camera x 1 pcs		USB to TTL Cable x 1 pcs	
Aluminum Cylinder x 4 pcs		M3 Screw x 8 pcs	
Power Cable x 1 pcs			
PWM Control Cable x 1 pcs			

TTL / S.BUS Control Cable x 1 pcs	
TTL Connect Cable x 3 pcs	
Ethernet Cable x 1 pcs	

## 2. Installation Instruction

### 2.1 Overview

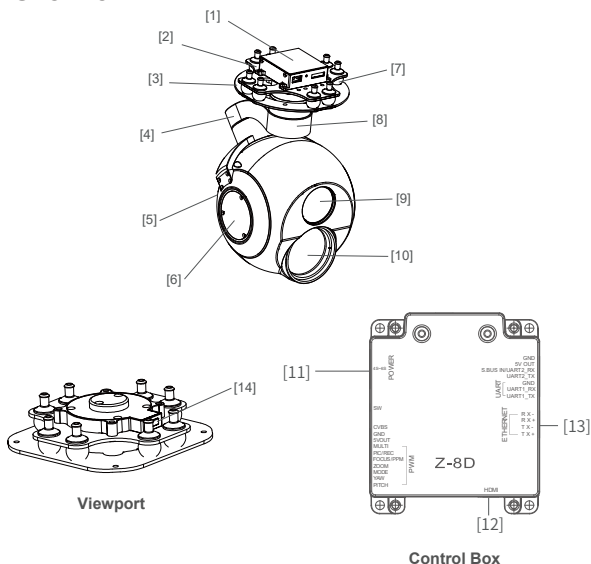

- |                         |                              |
|-------------------------|------------------------------|
| [1] Control box         | [8] Yaw axis motor           |
| [2] Upper damping board | [9] FHD zoom camera          |
| [3] Lower damping board | [10] Infrared thermal camera |
| [4] Roll axis motor     | [11] 4-6S power interface    |
| [5] TF card slot        | [12] Micro HDMI interface    |
| [6] Pitch axis motor    | [13] Ethernet interface      |
| [7] Damping ball        | [14] Viewport unlock button  |




- Please ensure that there isn't any obstacle while the motor rotating.
- Please remove the obstacle immediately if gimbal camera is blocked during rotation.




- Don't put the infrared thermal camera towards the sun in case any burn to the camera
- 


## 2.2.1 Control Box Printing (Standard Version)

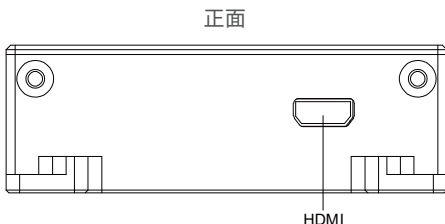

左侧

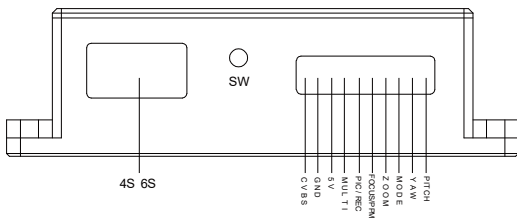


右侧

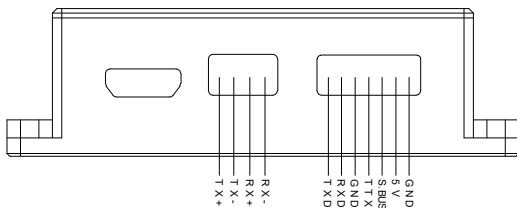


- The input voltage cannot be higher than 6S.
- The pin insertion interface cannot be connected with power supply.
- The yellow jumper cap cannot be removed

## 2.2.2 Control Box Printing (Viewport Version)


Front Side

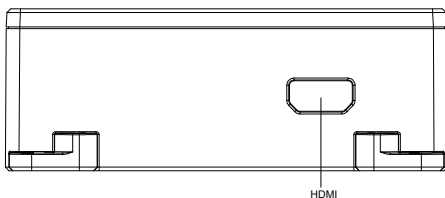

Left Side



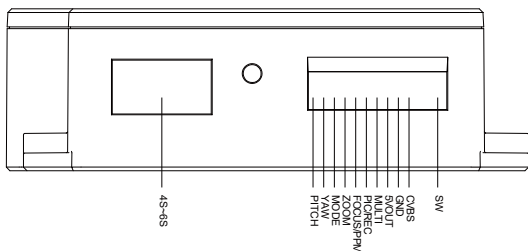


Right Side

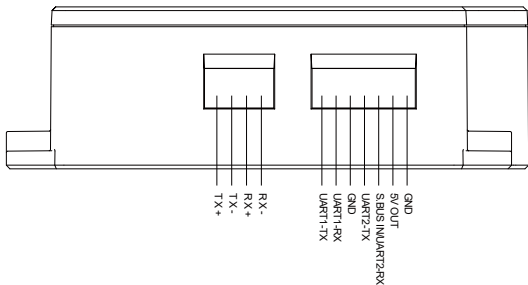




## 2.3 Device Dimensions (Standard Version)

Unit: mm

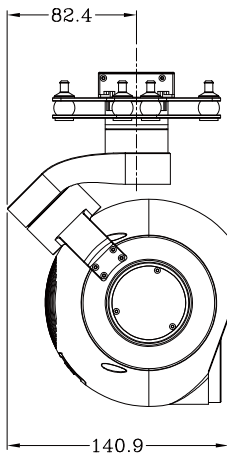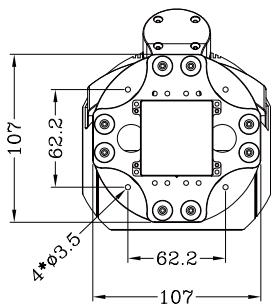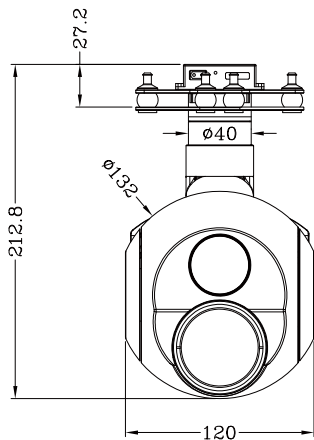


## 2.3 Device Dimensions (Viewport Version)

Unit: mm

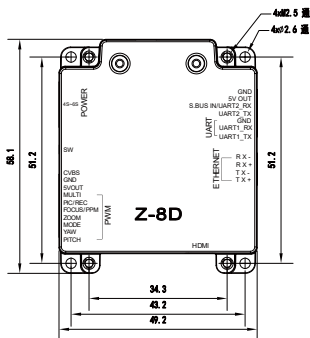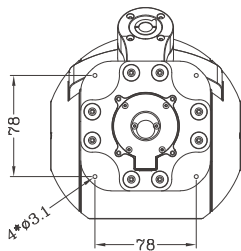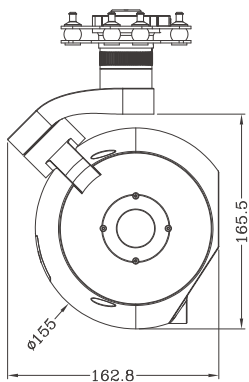


Control Box

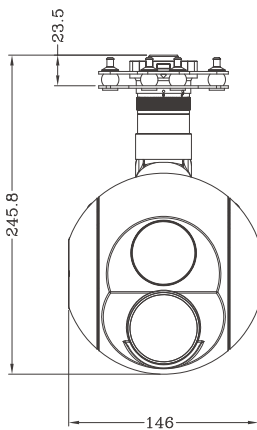


## 2.4 Install Mounting Part


- (1) Find out the arrow on the gimbal which indicating the yaw heading of the payload (i.e. the lens direction when the camera power on), and synchronize with the direction specified by the UAV.
- (2) Fix one end of the copper cylinder on the screw hole of lower damping board, and use M3 screw to fasten it.
- (3) According to the provided screw hole dimension you can make suitable mounting holes on the UAV mounting board, and fixes the other end of the copper cylinder on the mounting board of the UAV (Viewport version is the same).

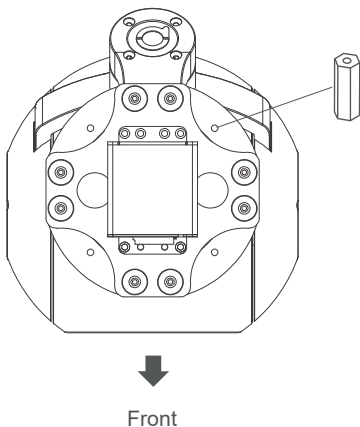


## 2.5 Viewport Release Instruction

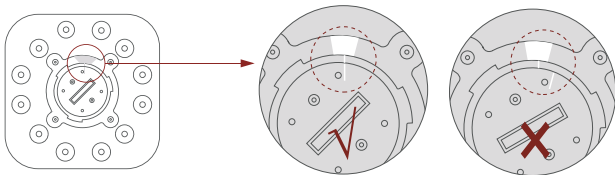


1. Make sure the two white stripes indicated in above picture are aligned with each other. (If the stripes are not aligned to each other, please pinch the connector part and turn it to left manually)

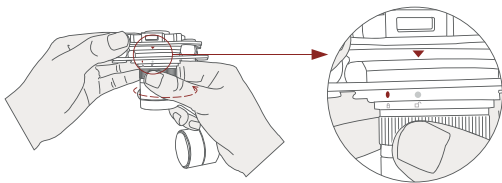

2. Align the white dot (unlock icon) to the red triangle (below unlock button), push the gimbal into the Viewport completely and then rotate the gimbal camera anticlockwise.

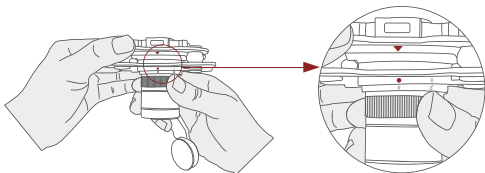

3. When you hear "click" sound (when red dot is aligned to the red triangle) means the gimbal camera and Viewport has been locked.

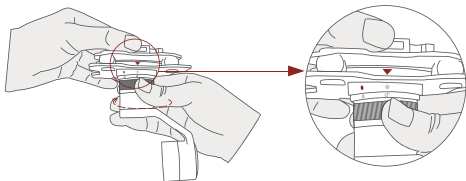

4. To unlock the Viewport, you need to press on unlock button and rotate the gimbal camera clockwise till the white dot align to the red triangle. Then pull the gimbal out from the Viewport.

## 2.6 Install TF Card

TF (Micro SD card): Install the TF card to the card slot (Re. 2.1 Overview). Support max 512GB. Request Class 10 (10m/s) transmission speed or higher and FAT32 format.



- Make sure device is power off when inserting the TF card, hot plugging is not supported.
- 

## 2.7 Image Output Interface

HDMI: micro HDMI output, HD 1080P 60/50/30/25fps, 1080P 60fps as default. (Optional)

Network: Ethernet output interface, support RTSP/RTMP/UDP video streaming. Default: RTSP output, IP address: rtsp://192.168.2.119:554, output resolution: 720P (record in 1080p), frame rate: 25fps, bit rate: 2M. (Optional)

SDI: SMA outer screw inner hole interface, 1080P 30fps output. (Optional)

AV: no AV output




- Above output mode is optional, HDMI and SDI output cannot coexist at the same time. Please subject to your actual product.
- When using user interface software Viewlink for network connection, the network of external device (computer) should be the IP address: 192.168.2.2 (choose the last byte among 2~254, can not be 119 same as the gimbal), subnet mask: 255.255.255.0, Default gateway: 192.168.2.1, and all firewalls of the computer must be closed. Then enter the IP address of the gimbal camera, Open Video, the video stream can be outputted.

## 3. Signal Control

### 3.1 PWM Control

Control the gimbal camera functions by the multiplex pulse width modulation signal outputted by PWM channel of the remote control receiver. The camera needs up to 7 control channels of PWM. You can choose needed functions according to actual usage to reduce the required number of PWM channels.


#### 3.1.1 PWM Connection Diagram (Connect pitch channel as example)

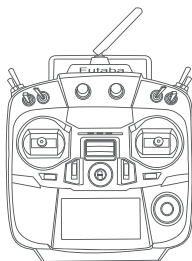

Remote Controller



Connection Diagram

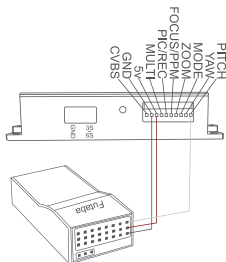

Receiver

## 3.1.2 PWM Control Operation Instruction

**1) Pitch** (PWM Pitch channel in to control Pitch. Joystick, rotary knob or 3-gear switch on remote control are optional. 3-gear switch as example.)



**Position 1**

Low Gear  
Pitch Up



**Position 2**

Middle Gear  
Pitch Stop



**Position 3**

High Gear  
Pitch Down

**2) Yaw** (PWM Yaw channel in to control Yaw. Joystick, rotary knob or 3-gear switch on remote control are optional. 3-gear switch as example.)



**Position 1**

Low Gear  
Yaw Left



**Position 2**

Middle Gear  
Yaw Stop



**Position 3**

High Gear  
Yaw Right

**3) Mode** (PWM Mode channel in to adjust speed control/one key to Home position etc functions. Rotary knob or 3-gear switch on remote control are optional. 3-gear switch as example.)



**Position 1**

Low Gear



**Position 2**

Middle Gear



**Position 3**

High Gear

Position 1: Low speed mode, control pitch / yaw with this mode at lowest speed

Position 2: Middle speed mode, control pitch / yaw with this mode at middle speed

Position 3: High speed mode, control pitch / yaw with this mode at highest speed

(If it is controlled by rotary knob, the speed will change according to switch position)

## Function of continuous switching:

**3.1)** Operate 1 time continuously and quickly, from position 2 - 3 - 2, to Home position.

**3.2)** Operate 2 times continuously and quickly, from position 2 - 3 - 2 - 3 - 2, the camera lens looks vertically down.

**3.3)** Operate 3 times continuously and quickly, from position 2 - 3 - 2 - 3 - 2 - 3 - 2, to disable Follow Yaw Mode (gimbal yaw not follows by frame)

**3.4)** Operate 4 times continuously and quickly, from position 2 - 3 - 2 - 3 - 2 - 3 - 2 - 3 - 2, to enable Follow Yaw Mode (gimbal yaw follows by frame)

**4) Zoom** (PWM Zoom channel in to control Zoom. Joystick, rotary knob or 3-gear switch on remote control are optional. 3-gear switch as example.)



**Position 1**

Low Gear  
Zoom Out



**Position 2**

Middle Gear  
Stop Zoom



**Position 3**

High Gear  
Zoom In

**5) Focus** (PWM Focus channel is to control PIP / IR color palette switch. 3-gear switch as example.)



**Position 1**

Low Gear  
PIP switch



**Position 2**

Middle Gear  
No control



**Position 3**

High Gear  
IR color palette switch

Switch from Position 2 to 1: Picture in Picture. EO+IR , IR+EO, EO only, IR only.  
Switch from Position 2 to 3: IR color switching: white hot, black hot, pseudo color.

**6) Pic/Rec** (PWM Pic/Rec channel in to control take picture and record. Joystick, rotary knob or 3-gear switch on remote control are optional. 3-gear switch as example.)



**Position 1**

Low Gear



**Position 2**

Middle Gear



**Position 3**

High Gear

Switch from Position 2 to 1: Take a picture

- OSD display 'REC IMG' a second.

Switch from Position 2 to 3: Start record / repeat operation to stop record

- Start record, the OSD display rec hh:mm:ss.
- Stop record, the OSD display STBY.

## 7) Multi: IR digital zoom / tracking control



**Position 1**

Low Gear



**Position 2**

Middle Gear



**Position 3**

High Gear

Switch from Position 2 to 1: IR digital zoom, 1x~4x

Switch from Position 2 to 3:

- Exit the tracking, display the cross cursor. Adjust the cross cursor to lock target object and start tracking

Switch from Position 3 to 2:

- Cancel tracking

## 3.2 Serial Port / TTL Control


TTL communication requirements: TTL signal is 3.3V, baud rate: 115200, data bit 8, stop bit 1, no parity, HEX send and receive.

**Connection Diagram** (PC - USB to TTL Cable- Gimbal Camera as example):

## Gimbal Camera

## Cable

TX ↔ RX (White)  
RX ↔ TX (Green)  
GND ↔ GND (Black)

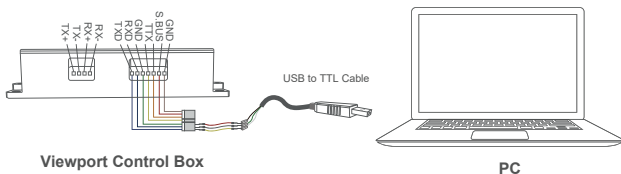

Connection Diagram

## Diagram of USB to TTL Cable:

Connect the camera to the upper computer by USB to TTL cable (Adopt connection method of TX to RX, RX to TX, GNG to GND at Dupont ends of the provided USB to TTL cable, connect to the specified TTL of the gimbal, and the USB end of the cable connect to computer).

Install Viewlink control software to test the functions directly. Users may choose to develop their own software, please contact technical support for TTL control protocol file.

ViewLink is a user interface developed by Viewpro for Viewpro gimbal cameras, you can download it from Viewpro website ([www.viewprotech.com](http://www.viewprotech.com)) or ask distributors for installation package.



- Connect serial port of gimbal to pins, DO NOT connect with power supply.




- The default baud rate of serial port is 115200, which can be changed according to the docking equipment.
- 

### 3.3 S.BUS Control

Control the gimbal camera functions by one combining signals. Connect the external S.Bus to S.Bus port on the control box, and the external S.bus signal GND connect to the GND interface of the control box.

Wiring Diagram (Take Futaba remote control for example):

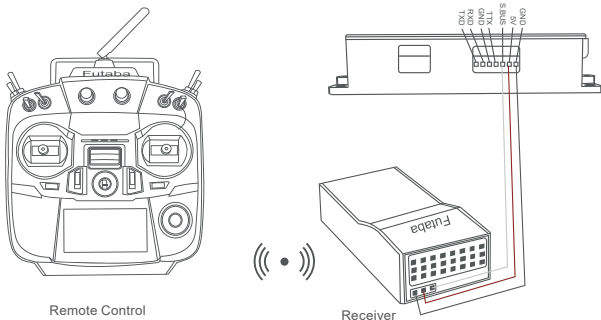

Wiring Diagram

S.Bus control mode: default S.Bus signal channel 7-13 to control gimbal camera functions (the function of channel is consistent with corresponding channel in PWM function description)

Channel 7: Yaw Control

Channel 8: Pitch Control

Channel 9: Mode Control

Channel 10: Zoom Control

Channel 11: Focus Control

Channel 12: Pic/Rec Control

Channel 13: Multi Backup



- User can set the channels by setting serial command according to the actual requirement. The S.Bus channel position can be arranged in any sequence within channel 1-15 to connect with the flight controller or remote control.

- TTL control and S.bus control cannot coexist at the same time for standard version. The default control is TTL if no requirement. The user can set to S.bus control if needed (please contact with our technical support for the setting instruction.)

---

## 3.4 TCP control

For Viewpro gimbal cameras with Ethernet output, the default IP address is: 192.168.2.119, control port: 2000. You can send the corresponding protocol to realize TCP control after connecting.

The TCP control protocol is [Frame header: EB + command ID: 90 data body (serial port protocol) + Checksum (CS = body checksum, checksum is calculated as a sum of all bytes of data body modulo 256)]. Or directly use UI Viewlink to control after TCP connection.

EB + command ID:90 + data length(one byte +data body (serial port protoco) +  
Checksum (CS = body checksum, checksum is calculated as a sum of all bytes of data  
body modulo 256)

## 4.Specification

Hardware Parameter	
Working voltage	16V
Input voltage	4S ~ 6S
Output voltage	5V (connect with PWM)
Dynamic current	820~2500mA @ 16V
Working environment temp.	-20℃ ~ +60℃
Output	IP (RTSP/UDP 720p/1080p 25fps/30fps) / SDI (1080P 30fps)
Local-storage	TF card (Up to 512G, class 10, FAT32 format)
Photo storage format	JPG(1920*1080)
Video storage format	MP4(1080P 30fps)
Card reading online	SMB read / HTTP read
Control method	PWM / TTL / S.BUS / TCP(IP output version)/ UDP(IP output version)
Geotagging	Support, display time and GPS coordinate in picture exif

Gimbal Spec	
Angle range of structure design	Pitch/Tilt: -110° ~ 130°, Roll: ±40°, Yaw/Pan: ±360°*N
Angle range of software design	Pitch/Tilt: -45° ~ 125°, Yaw/Pan: ±360°*N
Vibration angle	Pitch/Roll: ±0.02°, Yaw: ±0.02°
One-key to center	√
EO Camera spec	
Imager Sensor	1/2.8 Type STARVIS2 CMOS Sensor
Picture quality	Full HD 1080 (1920*1080)
Effective pixel	2.13MP
Lens optical zoom	30x, F=4.3~129mm
Digital zoom	12x (360x with optical zoom)
Min object distance	10mm(wide end) to 1200mm(tele end)
Horizontal viewing angle	64.0°(wide end) ~ 2.4°(tele end)
Sync system	Internal
S/N ratio	more than 50dB
Min illumination	Color 0.009 lux (1/30 sec, 50%, High Sensitivity mode On)
	Color 0.09 lux (1/30 sec, 50%, High Sensitivity mode Off)
Exposure control	Auto, Manual, Priority mode(shutter priority & iris priority), EV compensation, Slow AE

Gain	Auto/Manual 0dB to 50.0dB(0 to 28 steps) Max.Gain Limit 10.7 dB to 50.0dB (6 to 28 steps)
White balance	Auto, ATW, Indoor, Outdoor, One Push WB, Manual WB, Outdoor Auto, Sodium Vapor Lamp (Fix/Auto/Outdoor Auto)
Shutter speed	1/1s to 1/10,000s, 22 steps
Backlight compensation	Yes
Defog	Yes
OSD	Yes

### IR Thermal Imager Spec

Focus Length	50mm
Horizontal FOV	17.5°
Vertical FOV	14.0°
Detective Distance (Man: 1.8x0.5m)	2083 meters
Recognize Distance (Man: 1.8x0.5m)	521 meters
Verified Distance (Man: 1.8x0.5m)	260 meters
Detective Distance (Car: 4.2x1.8m)	6389 meters
Recognize Distance (Car: 4.2x1.8m)	1597 meters
Verified Distance (Car: 4.2x1.8m)	799 meters

Working mode	Uncooled long wave (8μm~14μm) thermal imager
Detector pixel	1280*1024
Pixel pitch	12μm
Focusing method	Athermal prime lens
NETD	≤40mK@25℃,F #1.0
MRTD	≤400mK@25℃,F #1.0
Shutter	Bistable Shutter
Color palette	White, black, pseudo color
Digital zoom	1x ~ 4x
Thermometry type	Not supported

### EO/IR Camera Object Tracking

Update rate of deviation pixel	50Hz
Output delay of deviation pixel	5ms
Minimum object contrast	5%
SNR	4
Minimum object size	32*32 pixel
Maximum object size	128*128 pixel
Tracking speed	±48 pixel/frame
Object memory time	100 frames (4s)

The mean square root values of pulse noise in the object position	< 0.5 pixel
<b>Packing Information</b>	
N.W.	1432 ± 10g(Viewport version with Viewport)
Product meas.	146*162.8*240.1mm / 146*162.8**245.8mm (Viewport version with Viewport)

## 5. FAQ

1. What outputs that Q30TIR pro supports ?

A: HDMI 1080p 60fps(default) / HDMI 1080p 50 / 30 /25fps

2. How is Q30TIR pro photo and video stored?

A: Photo storage format: JPG (1920\*1080)

Video storage format: MP4 (1080P/30fps)

3. Does Q30TIR pro support taking photos during recording?

A: Yes

This user manual is subject to update without notice. For details, please visit <http://www.viewprotech.com/index.php> to get the latest product information.

Technical support : [support@viewprotech.com](mailto:support@viewprotech.com)